






# R1- SPOT

## Instrukcja montażu

Installation instructions  
Instructions de montage  
Montageanleitung

IP20

  
230 V  
50 Hz

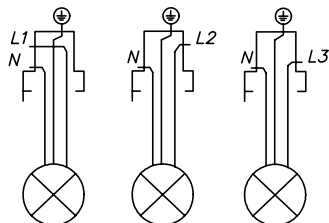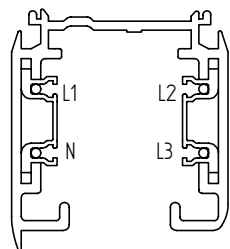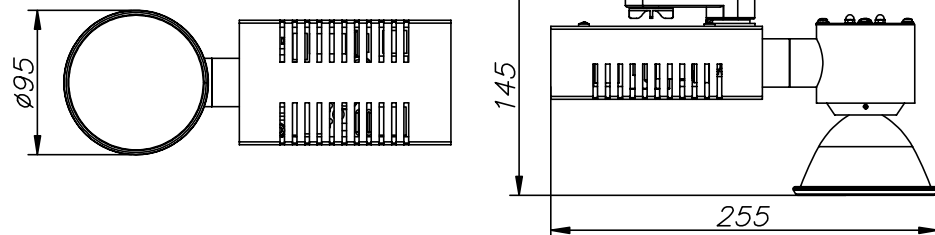


XTSA66\XTSA 68  
230V, 10A, 2,3 kW  
GA69  
230V, 6A




PL - Wyłączyć zasilanie przed wymianą lampy.  
UK - Disconnect the unit before changing the lamp.  
F - Debrancher l'appareil avant de changer la lampe.  
D - Von den Auswechseln der lampe die Leuchte von der Netzspannung trennen.

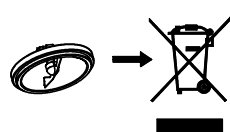

①

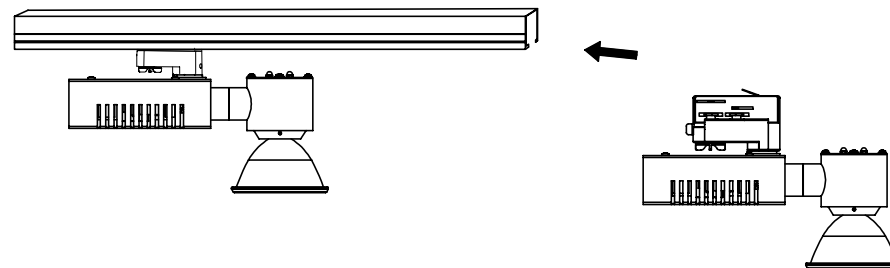

②

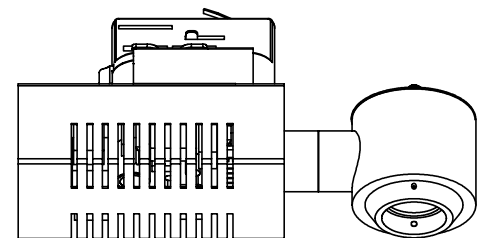

③

